

Navigation system quick reference

Getting around the system



Joystick and ENTER button

Joystick – The joystick has eight movements (up/down, left/right, and diagonal), and has the following functions:

- Highlights menu items, setup options and text items (up/down).
- Character and number input (up/down, left/right, and diagonal).
- Scrolling map position (up/down, left/right, and diagonal).

ENTER button – Push the top of the joystick. This has the following functions:

- Selects the highlighted menu item, setup option or text item.
- After scrolling the map, shows the map cursor location details highlighted in a text box. (Push ENTER again to select.)



MENU button

Displays the main menu. Highlight the option required using the joystick (up/down) and push ENTER.



CLEAR button

The CLEAR button has the following functions according to the screen currently displayed:

- Returns to the previous menu, character input or text screen.
- Push and hold for two seconds to change the map orientation.



REPEAT button

While under guidance, repeats the last audible instruction. If the manoeuvre point has been passed, the audible instruction for the next manoeuvre point will be heard.



ON/OFF button

Push ON/OFF at any time to turn the screen off. The system continues to operate and to monitor vehicle position.

Push ON/OFF again to turn the screen back on. (The road safety caution screen is only displayed when the ignition is switched on.)



MAP button

The MAP button has the following functions:

- Returns to the map display, showing the current vehicle position, from any other screen, or after scrolling the map.
- While under guidance, toggles between map and arrow view.



SCALE control

The SCALE control (up/down) has the following functions:

- Changes the scale (reduce/enlarge) when a map screen is displayed.
- Displays more pages of text, when the scrolling arrows are displayed at the top or bottom of a screen.



LIST button

Lists the turn information for the calculated route.

Options available before driving

Changing the display colour

MENU → Setup → Display Colour → Select Day, Night or Auto.

Selecting a language

MENU → Setup → Language → Select a language.

Selecting the guide method

MENU → Setup → Guide Method → Select Hybrid, Arrow or Map.

Editing memory points

MENU → Option → Edit Memory Points → Select a point to edit or delete.

Editing recent destination points

MENU → Option → Edit Recent Dest. Points → Select a point to delete, or delete all points.

Options available while driving under guidance

Cancelling guidance

MENU → Route → Cancel Current Destination → Confirm the on-screen prompt.

Avoiding roads

MENU → Route → Avoid Roads → Select a road → Reroute → ENTER to Proceed.

Changing the calculating method

MENU → Route → Change Calculating Method → Select a method.

Changing map heading

CLEAR → Push and hold for two seconds to change the map orientation (north or vehicle heading to top of screen).


Repeating voice guidance

REPEAT → Repeats the last audible instruction.
(If the manoeuvre point has been passed, the audible instruction for the next manoeuvre point will be heard.)

Listing turns information

LIST → Displays the turn information for the calculated route.

Menu structure

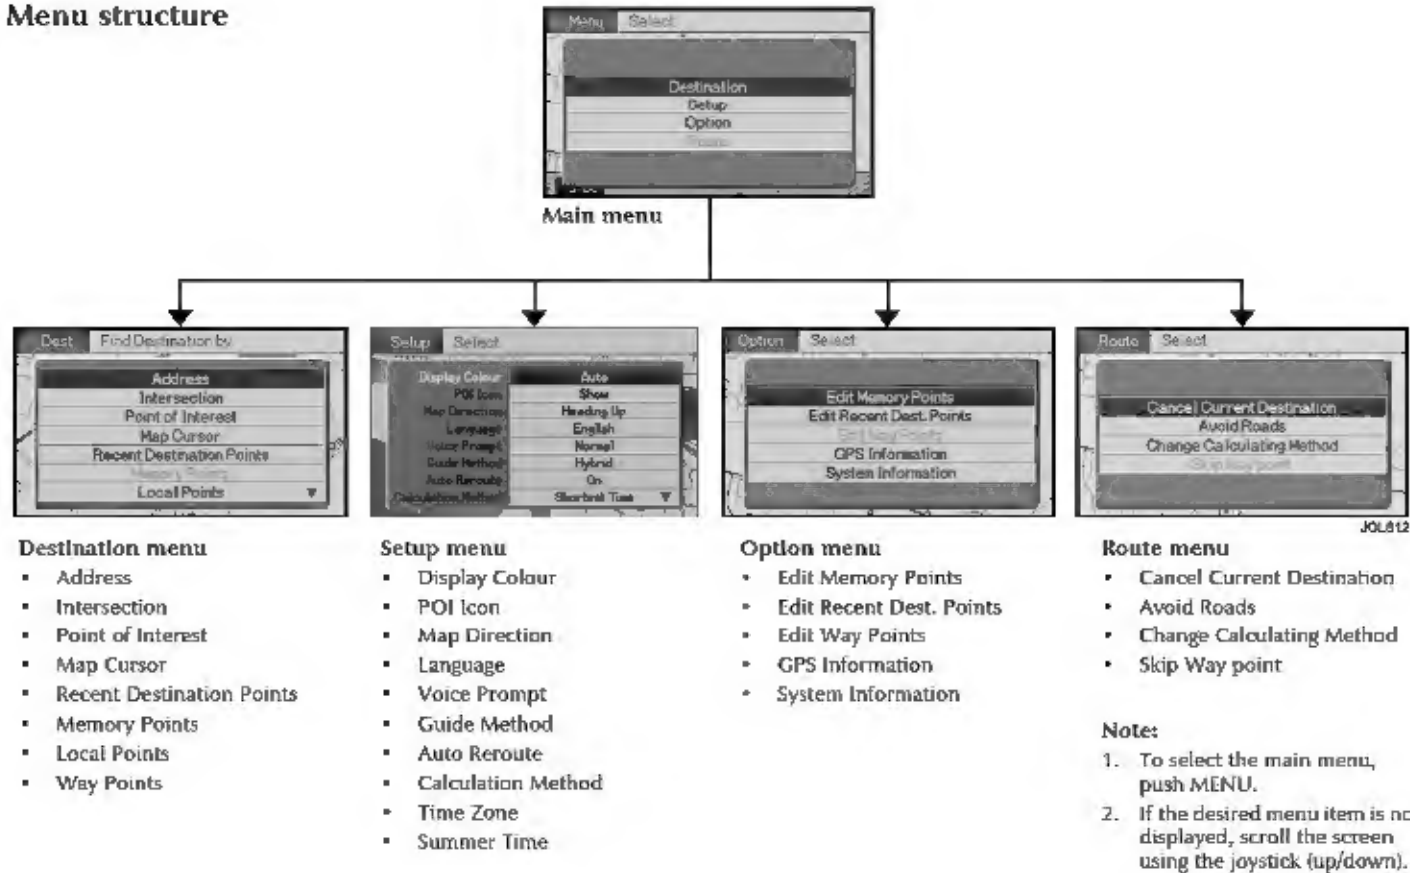

Getting started

To make a selection, highlight the item required using the joystick and push ENTER.

Initialisation

Analogue Clock → Caution screen → Map display.

Entering a destination by address

MENU → Destination → Address → Street/City Name Input → Enter the address details → Confirm Destination → ENTER to Proceed.

Entering a destination to a city centre

MENU → Destination → Map Cursor → City Name Input → Enter the city name.
(The system defaults to the centre of the city entered.)

Storing a frequently used location as a destination

Enter the address details → Confirm Destination → Set Memory Point.


Selecting a frequently used location as a destination

MENU → Destination → Memory Points → Select a Memory Point → Confirm Destination → Set Memory Point.

Selecting a point of interest

MENU → Destination → Point of Interest → Place Name Input/Category List → Select a point → Confirm Destination → ENTER to Proceed.

Typical guidance screen

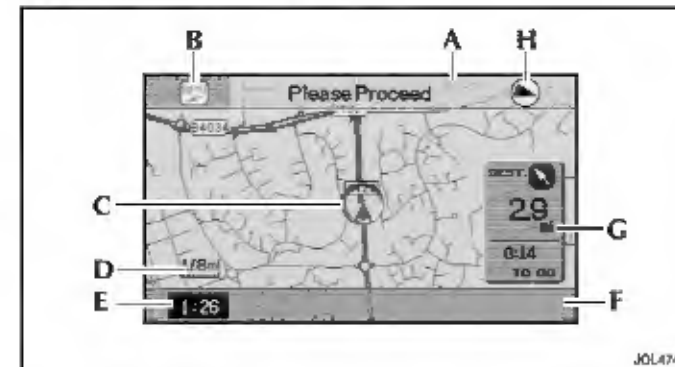

- A. Upper message area
- B. GPS symbol
- C. Navigation symbol
- D. Map scale
- E. Clock
- F. Lower message area
- G. Destination information
- H. Map orientation symbol